



### Instructions

### 1. Power On/Off

Press Fire Button 5 times in 1.5 seconds to nower the device on off the LED Indicator

Start Vaping
Hold the fire button to start vaping.

### 3. Battery Level Indication

Battery Level > 3.7V, while holding the Fire Button, the LED will light in white Battery Level < 3.7V, while holding the Fire Button, the LED will light in red

### 4. Overtime Warning

The device will cut power after 10 second of continuous firing, LED indicator will flash

### 5. Low Voltage Protection

When battery level is below 3.2v, while press the Fire Button, LED Indicator will flash 10. times in white and cut power.

### 6. Short-circuit Protection

When there is a short circuit, while pressing the Fire Button, LED Indicator will flash 3 times in red and out nower

### 7. Over Temperature Protection

When the board temperature is above 75℃, LED Indicator will flash 6 times in white and red and cut power.

### 8. Charging

Charging: MicroUSB DC5V/700-800mA While charging, LED Indicator will stay lit in red, when battery is fully charged, the LED will turn white and stay lit for 15 seconds before going dim. Charging time: About 3 hours.

# Filling Eliquid

- 1. Remove the Top Cap by screwing the cap counterclockwise
- 2. Filling Fliquid, (See graphic #2)
- 3. Put Top Cap back on, if coil is new, wait for







# WARNING 注意事项

- damage to your device.
- 2. Please use the original charging cable, or a quality replacement when charging this device.
- 3. When not using your device for a long period of time, please turn it off and store it in a cool dry place to prevent potential damage. Check the battery periodically for signs of discharge.
- Should damage occur, please do not attempt to repair yourself. Use any available warranty, or contact a professional for repairs.
- 5. Please keep this product and accessories away
- 6. Please read this manual, and follow its instructions closely.
- 7. To clean the device, use only a slightly damp towel, and do not allow moisture to get in the
- 1. 请正确使用产品包装中的各个附件, 防止操 作不当而损坏产品。
- 2. 产品长期不使用时,应存储在干燥、安全的 地方, 以免受到损坏, 3. 产品出现故障请不要亲自尝试维修,应请专
- 业人十维修。 4. 存放产品及配件的地方要保持不能让儿童接 触的距离, 以免发生意外。
- 5. 请严格遵守使用规则, 并且在使用时, 尽量 避免摔打

# Нот Натсн

# 产品参数

产品尺寸: 22.3mm \* 118.0mm 雾化器容量: 2.2ml 雾化芯阻值: 0.25Ω



使用说明

开机: 1.5S内连续按按键5次, 红白灯闪烁

关机· 15S内连续按按键5次 红白灯闪烁 二次。

# 2. 吸烟操作

长按点火键即可吸烟,指示灯长亮。

# 3. 电池电量灯指示

≥3.7V时白灯亮, <3.7V时红灯亮。

当一直有吸烟动作,时间超过10S时,红 白灯闪烁5次,同时关闭输出。

## 5. 低压保护

电池电量低于3.2V时,按下吸烟键,白色 LED闪烁10次,同时关闭输出。

## 6. 短路保护

输出过程中或者输出前端口发生短路,红 色LED闪烁3次,同时关闭输出。

### 7. PCB讨温保护

输出过程中PCB板温度达到75℃时红白 LED闪烁6次,同时关闭输出。

# 8. 电池充电

充电规格: micro USB DC5V / 700-800mA。

充电显示: 充电过程中, 红色LED长亮, 充电完成白色LED亮15S后灯灭。

充电时长: 3小时左右。

# 添加烟油

- 2. 将烟油沿管壁往内注入适量烟油。
- 3. 注好烟油后,将注油盖顺时针旋转拧紧, 静置3-5分钟后连接主机即可使用。



# 更换雾化芯

- 1. 逆时针旋转,取下注油盖。
- 2. 向上拔出玻璃仓。 3. 逆时针旋转,取下需要更换的雾化新。 4. 换上新的雾化芯,将新雾化芯顺时针拧
- 5. 重新装上玻璃仓,再把注油盖顺时针拧 紧,完成换芯。







# 小钢炮 说明书

尺寸: 210x80mm

材质:120g双铜,表面哑膜



要求: 梯字型对折成5页, 对折后尺寸为: 80x42mm

В